




Components for typical installation

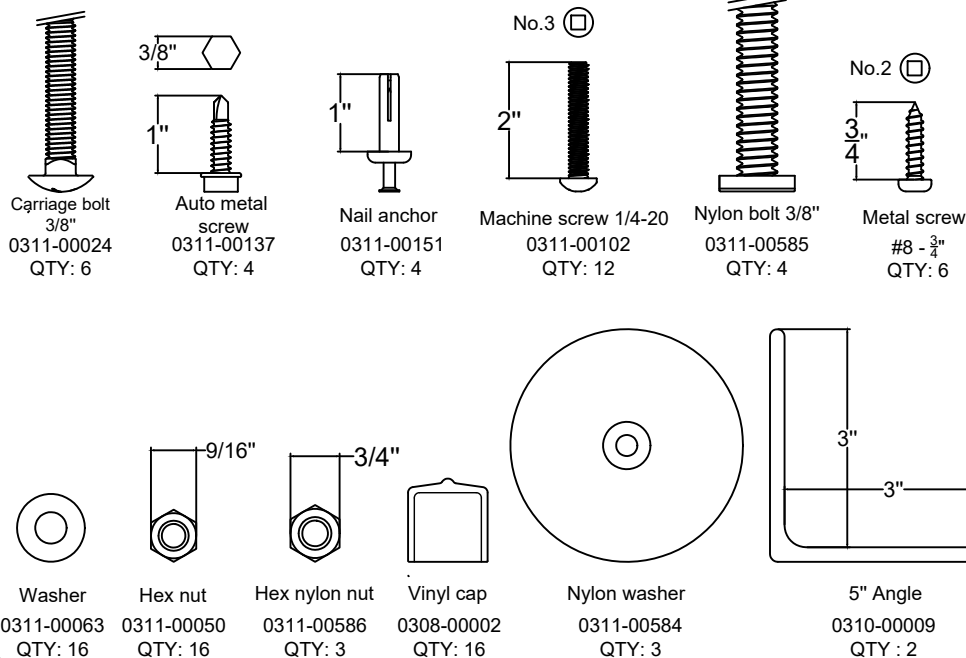


Tool list

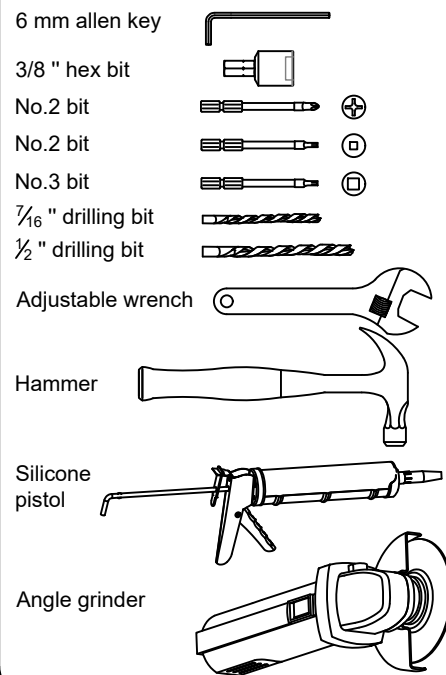

Rail

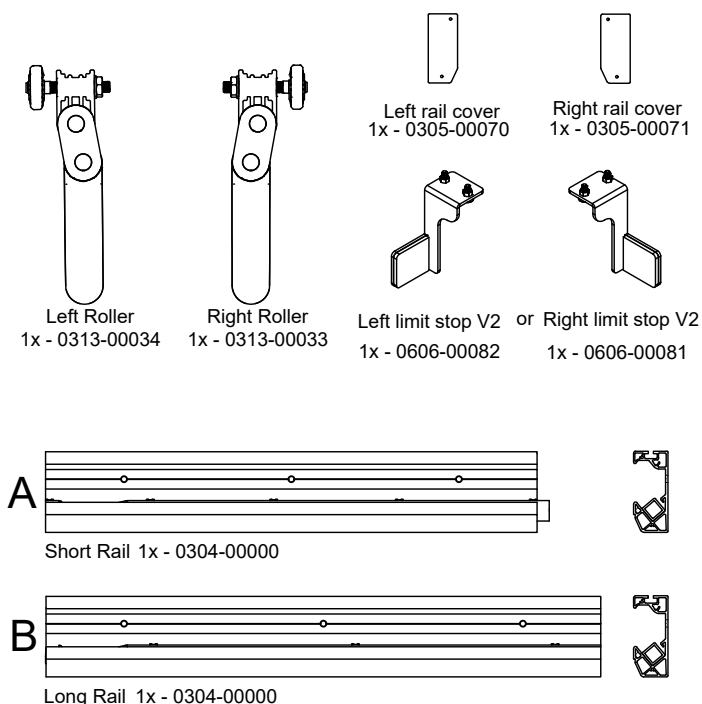


Wall Guide

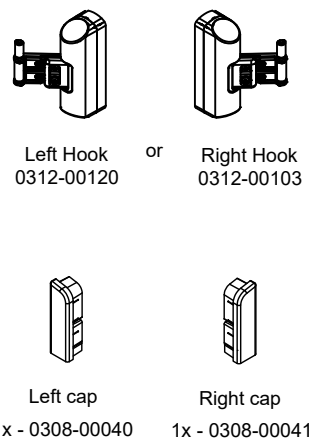


Step 1.

Cut the door opening in the panels. Allow a clearance of 1-1/2" in width and 1" in height to the finished opening dimension shown on the installation plan.

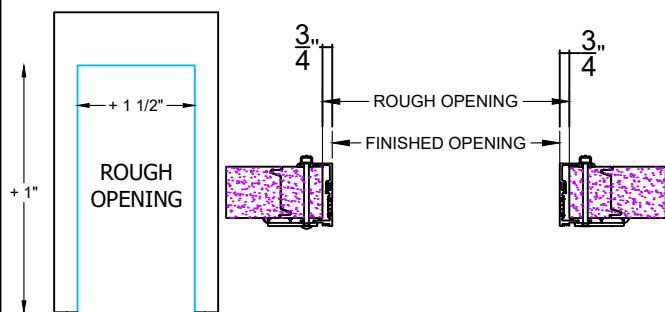


Step 2.

Insert the outer frame assembly in the opening and hold it in place while injecting urethane, between the panel opening and the outer frame.

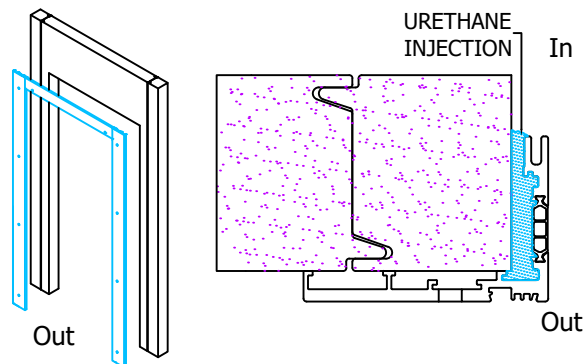


Step 3.

Insert the internal frame studs into the external frame. Secure temporarily with clamps. Make sure that both parts of the frame are properly interlocked all around the door and that the joints are aligned with each other to achieve a flush finish.

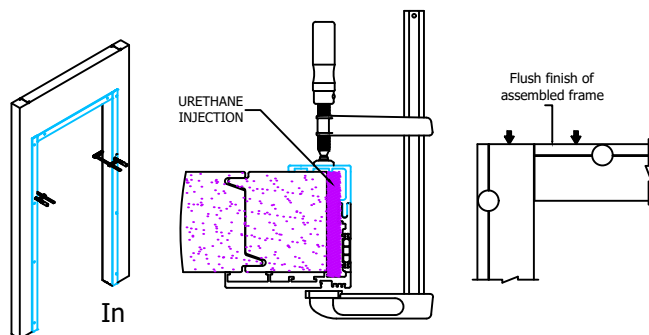


Step 4.

Following the starter holes in the frame (10x), drill the passing holes with a 7/16" drill bit.

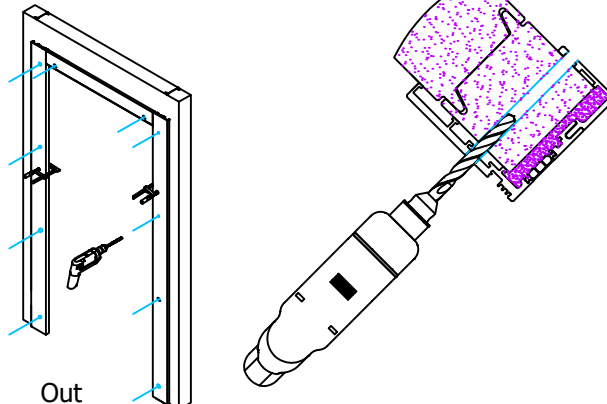


Step 5.

Secure the full frame with carriage bolts, washers and nuts provided with the kit. (Do not over-torque and deform the panel)

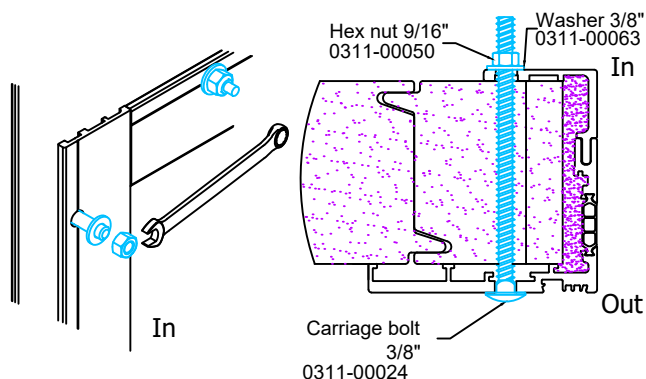


Step 6.

From the inside of the room, cut the excess of the carriage bolts with an angle grinder so that one (1) thread is visible. Cover with the vinyl caps.

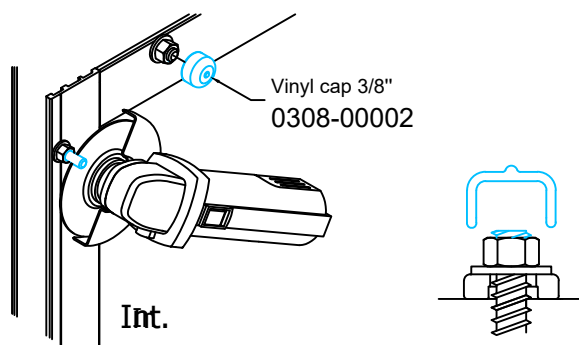


Step 7.

Install the reinforcement angles at the bottom of the interior walls, on both sides of the frame, using the anchors and screws provided in the kit

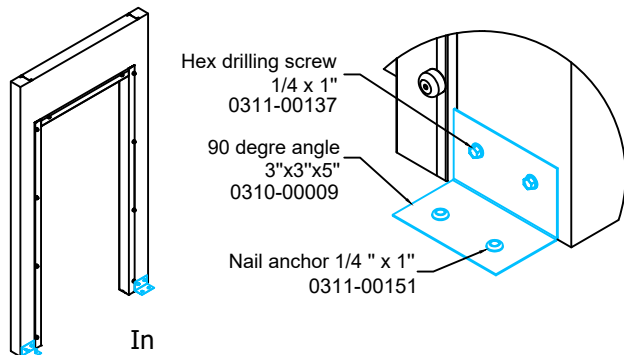


Step 8.

Apply silicone all around the frame, outside and inside the room.

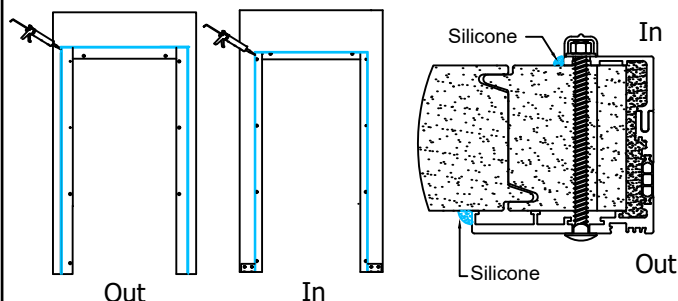

Step 9.


For self closing door see step 9.1 first. Position the A rail at 1 1/2" from the side left side of the frame for a right sliding door and right side for a left sliding door. Mark the position of the rail holes on the wall. Drill the holes through the panel with a 7/16" drill bit.

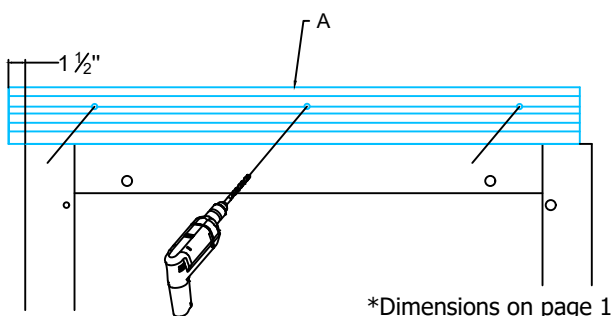

Step 9.1


FOR A SELF CLOSING DOOR

Insert a 1/4" shim at 28 5/8" between the rail and the frame to create an angle on the rail before following instructions of step 9.

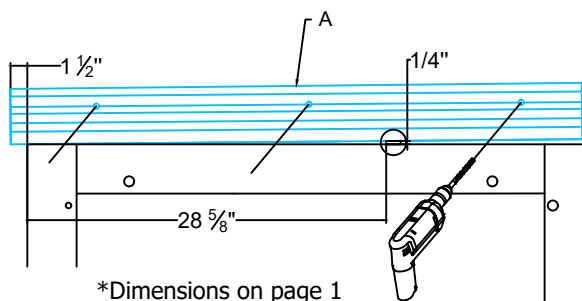


Step 10.

Secure the rail A with the carriage bolts, washers and nuts provided with the kit. (Do not over-torque and deform the panel)

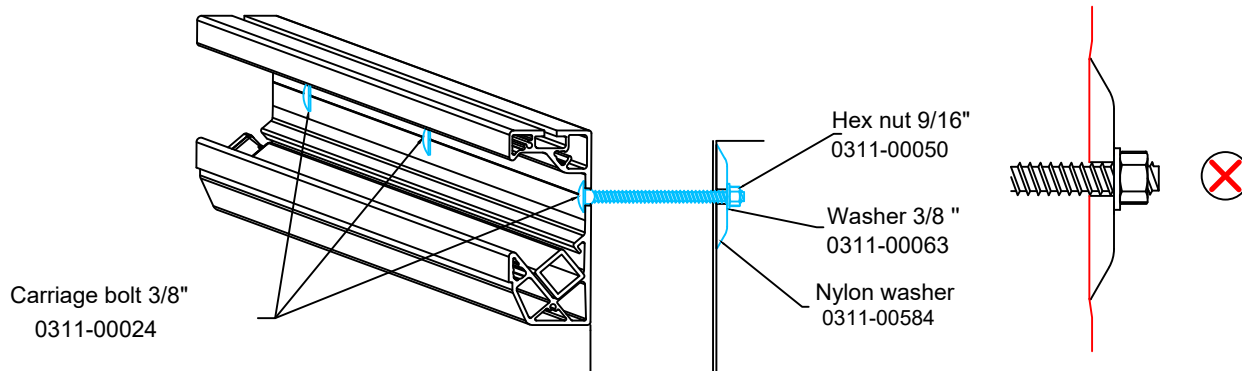

Step 11.

Position the B rail. Mark drilling holes position of the rail. Drill holes through the panel with a 7/16" drill bit.

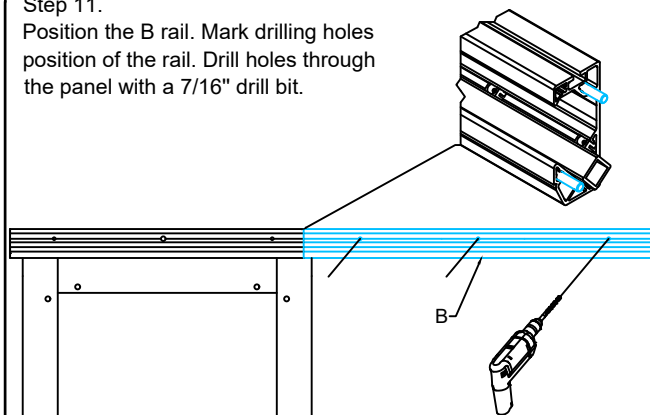


*Dimensions on page 1

Step 11.1

FOR A SELF-CLOSING DOOR


Position the B rail aligned with the angle. Mark drilling holes position of the rail. Drill holes through the panel with a 7/16" drill bit.

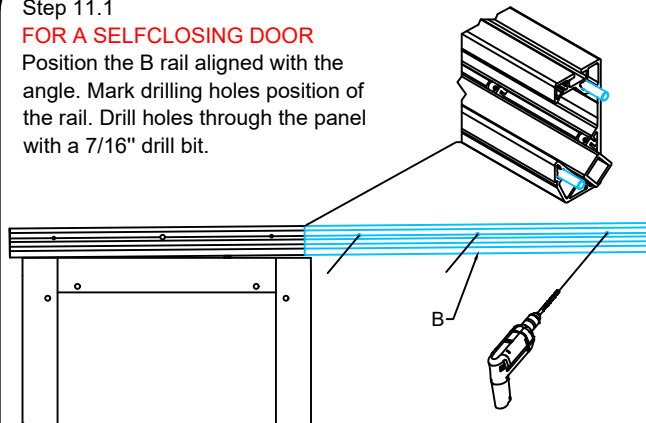

*Dimensions on page 1


Step 12.

Secure the rail B with the carriage bolts, washers and nuts provided with the kit. (Do not over-torque and deform the panel)

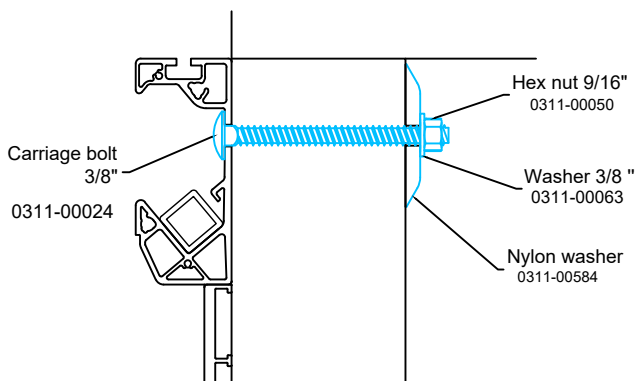


Step 13.

Install the two rollers on the door with the four screws centered to the slotted holes of the rollers.

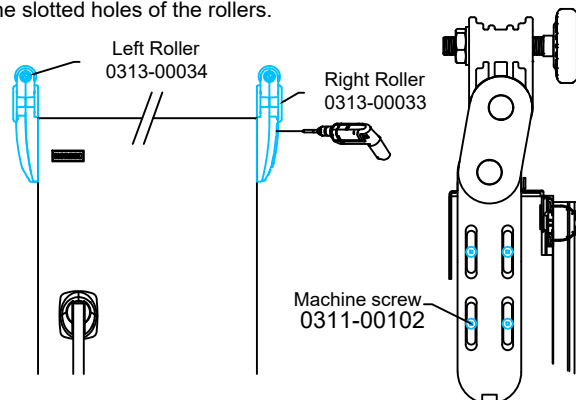


Step 14.

Install the hook on the door with 4 screws. Position the hook straight at $\frac{1}{4}$ " from the door's sheet metal corner.

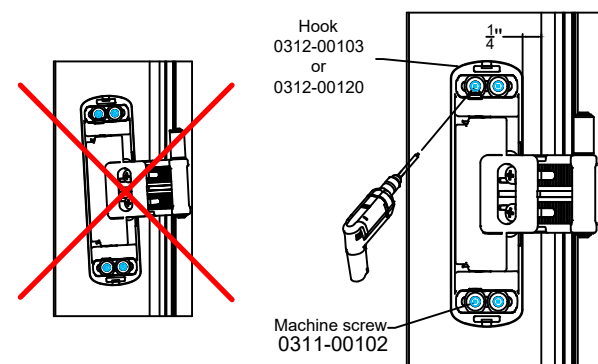

Step 15.

Slide the door in the rail and close the door.

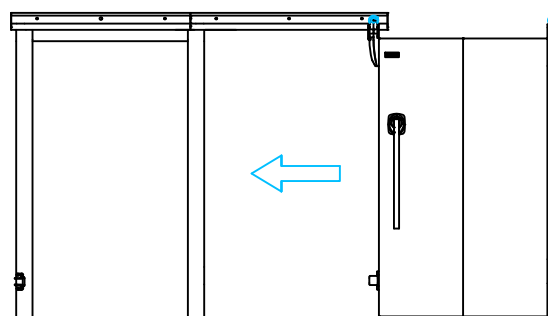

Step 16.


Adjust the door height so that the insulation gaskets are well compressed against the wall.

Screw A: Adjust the distance between the door and the wall

Screw B: Loosen the roller to adjust the height with screw C **BE CAREFULL NOT TO OVERTIGHT THE SCREWS**


Screw C: Adjust the height of the door in relation to the floor

The gaskets are well compressed when the door in closed position is 1 1/4" from the frame and 1 1/4" from the floor for the sweep.

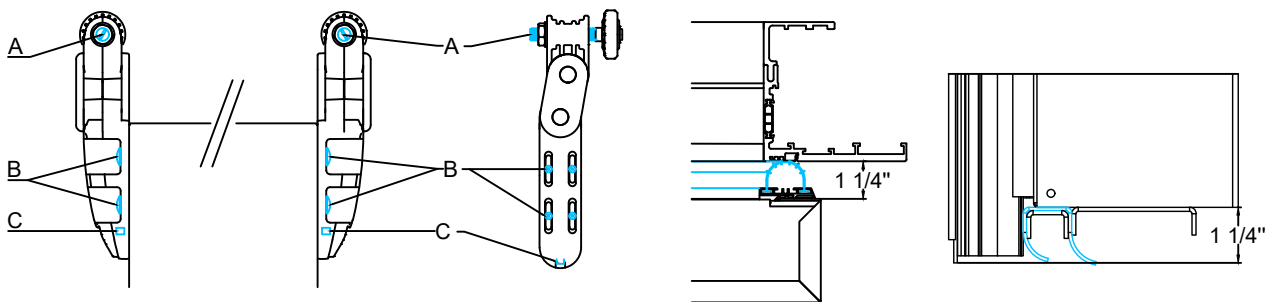


Step 17.

Slide the end stop on the rail, align the bracket flush to the edge of the rail and screw the end stop in place. For a right sliding door, end stop is installed on the right end of the rail B and for a left sliding door on left end of the rail B.

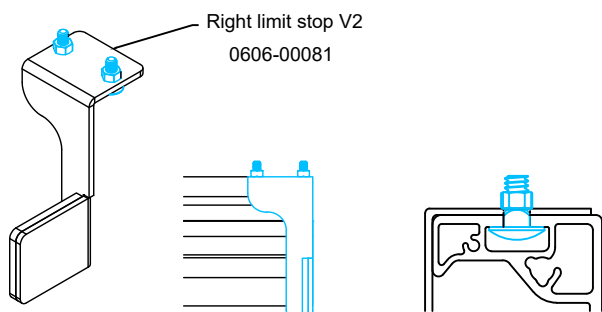

Step 18.


Slightly open the door and draw a line above the guide's roller. Fully open the door and draw another line above the guide's finger. On the wall, draw a line that connects the two marks.

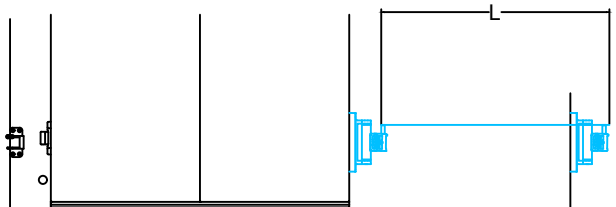

Step 19.


Drill three 1/2" holes: one at 2" from the frame, one at the center of the line done at step 18, and one at 2" from the end of the line.

IMPORTANT: each hole must be drilled 7/8" above the marked line.

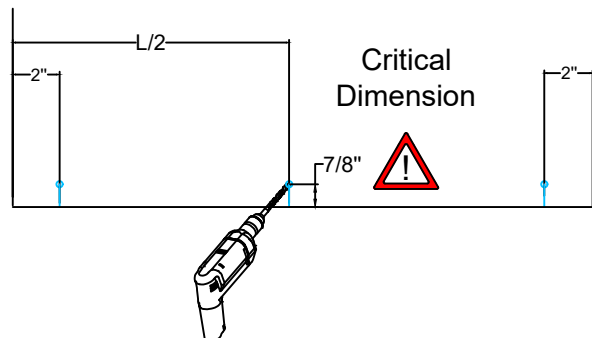


Step 20.

Insert the 3 nylon bolts, the caps and the guiding hook on to the bottom guide rail. Make sure the wall guide touches the frame.

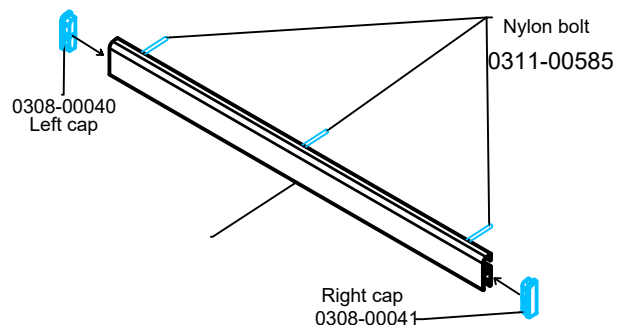


Step 21.

Insert the nylon bolts in the holes made in step 19 and solidify from the inside of the room with nylon nuts and washers. DO NOT COMPRESS THE PANEL.

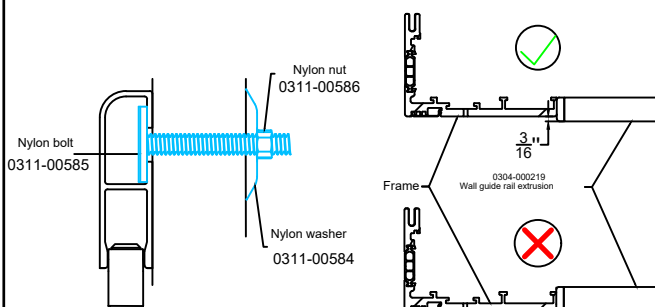


Step 22.

Open the door for the hook to be perpendicular to the rail. Adjust the length of the hook by loosening the screws and extend the arm until the distance between the door and the rail is $1 \frac{3}{4}$ ".

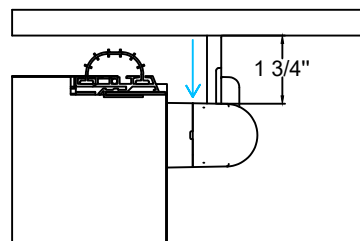


Step 24.

Make sure the hook is at $\frac{5}{8}$ " from the wall guide rail by adjusting the height of the door in closed position by following step 16.

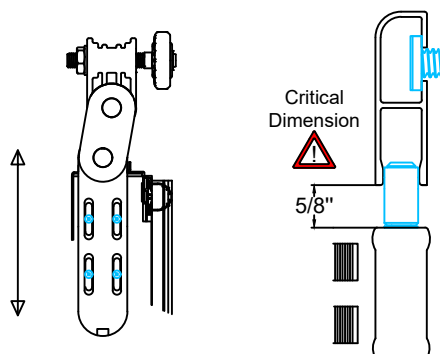


Step 24.

Install the covers of the rollers, the hook and the rail.

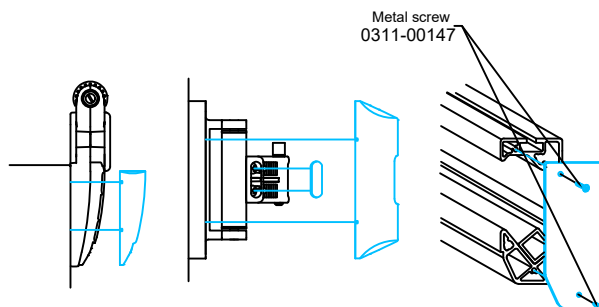


Step 25.

Screw the frame protection plate on to the frame at 66" from the floor. Make sure the lever bears against the plate when used.

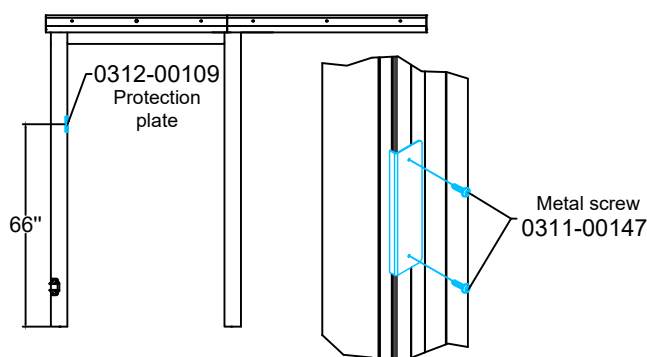


For the assembly of the **electric motor option**, please refer to:
E-Circuit user and installation manual.


HOOD OPTION Components

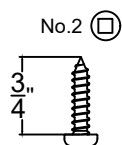


Metal screw
14x - 0311-00147




$\frac{5}{16}$ " Carriage bolt
6x - 0311-00597

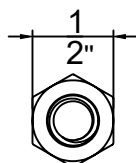


Hex nut $\frac{5}{8}$ "
6x - 0311-00049




Hood bracket
1x - 0310-00073




LEFT rail cover hood option
0305-00072 - Stainless
0305-00077 - Igloo White
0305-00079 - Other color
QTY: 1



RIGHT rail cover hood option
0305-00073 - Stainless
0305-00078 - Igloo White
0305-00080 - Other color
QTY: 1




Zbar hood option
3X - 0305-00074



2x - 0328-00342 Top plate for sliding door hood - variable length

Tool list

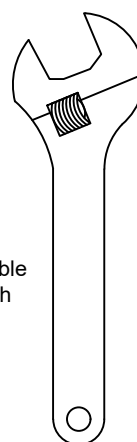

Adjustable
wrench




No. 2




Step 1

Screw on the covers on the rails.

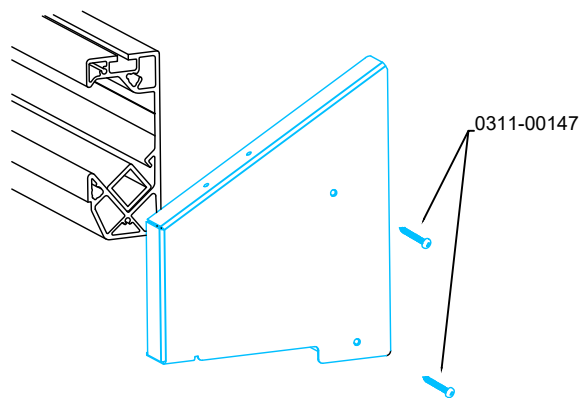



Step 2

Place the Zbars on the rail equally spaced. Keep the middle Zbar free for further adjustment.

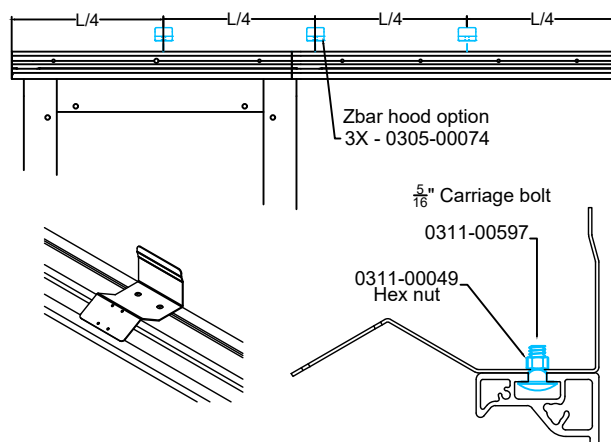

Step 3

Place one of the two half of the hood on the covers. To install the hood, it needs to be inserted between the Zbars and the wall. Make sure that the hood is aligned with the holes.

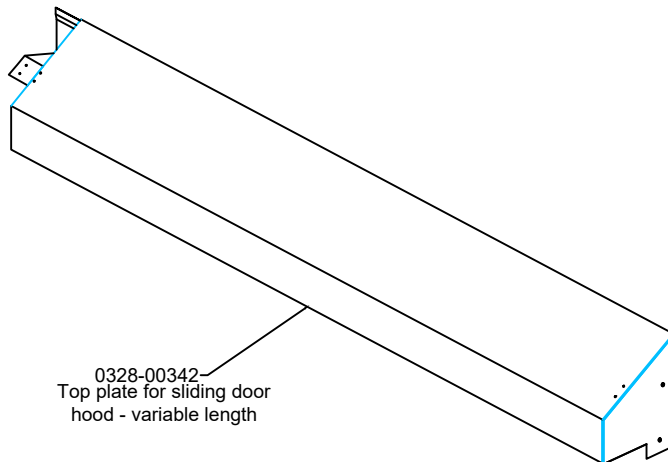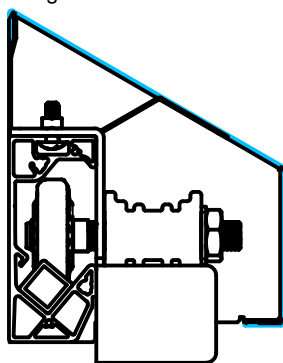


0328-00342
Top plate for sliding door
hood - variable length

Step H4.


Screw one end of the hood to the cover. Screw the other end of the hood on the middle Zbar and screw the Zbar on the rail.

Metal screw
2X - 0311-00147

Metal screw
0311-00147

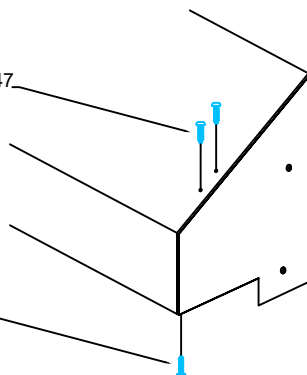


Metal screw
2X - 0311-00147

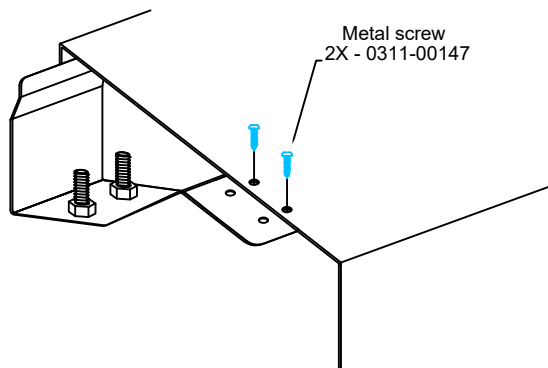


Step 5

Install the other half of the hood following the previous steps.

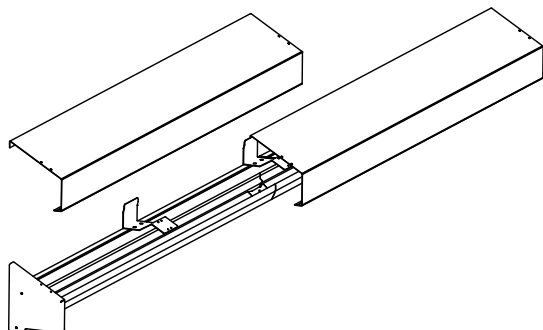

Step 6

Place the hood bracket inside the inferior bend, align the holes and screw it to the hood.

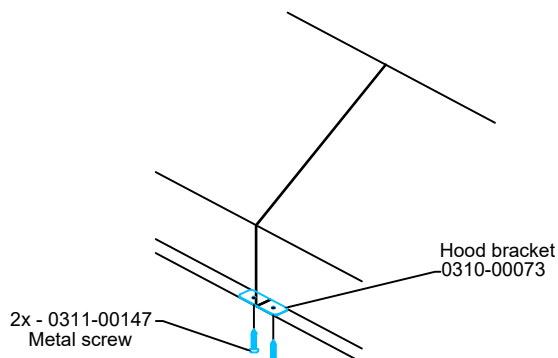

2x - 0311-00147
Metal screw

Hood bracket
0310-00073

PROTECTION ANGLE OPTION

Components




1x - 0305-00008 Protection angle 3/8" x 4" x 6" x 66" steel painted grey



Screw anchor KH-EZ 3/8 x 3-1/2"
6x - 0311-00382

Drill Machine

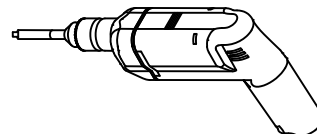


3/8" concret drilling bit



Step 1.

Position the angle flush to the opening of the door and parallel to the wall. Leave a 1" gap between the door and the angle with the door in open position.

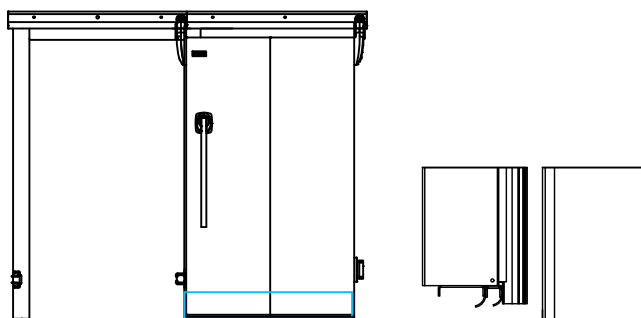

Step 2.

Fasten the protection angle through the predrill holes on to the concrete with the anchors.

